


Temperature & Humidity Tracker Manual

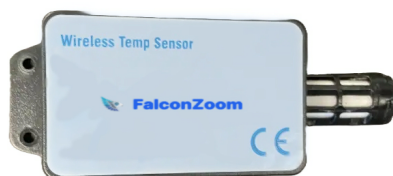

Technical Specifications

Built-in Battery	1200mAh/3.6V (not chargeable)
Sensor Detecting Range	-67° F to 257° F
Operating Range	-22° F to 140° F
RF Frequency	433Mhz
Modulation	GFSK
Max. distance in open wild	300 meters
Standby Current	<1uA
IP Level	IP66
Battery Life	3 years (if every 60 seconds interval transmit)
Net Weight	80grams
Dimensions	63x38x31 (all in millimeter)

Description

The temperature and humidity tracker is a new designed high-quality wireless acquisition terminal. With long data transmission distance (300m), small size (63mm*38mm*31mm) and long battery life (3 years' battery life if every 60s data), it is an important tool for any fleet manager. Temperature value is collected by the transmitter, then our Tail Light tracker will parse out information and reflect it in the back end portal. EveryTag06 has a one and only ID on factory setting. Combine with our Tail Light Tracker above and all steps are done. Congratulations! You have installed a brand-new state of the art tracking device.

Installation

1. Each Temperature tracker must be paired with a Tail Light Tracker that has been purchased from Falcon Zoom. After connecting the TLT with the Temperature tracker the data stored in the temperature tracker can be shared in the Back-end portal: <https://track.falconzoom.com/>
2. Install the Temperature tracker near the back door of the trailer to have it as close to the Tail Light Tracker as possible.
3. Use the 3M tape to stick the Temperature tracker in the appropriate location of the trailer.
4. Congratulations!

